- 2 Pre-treatment-foreword
- 3 Pre-treatments Sections
- 4 Battery
- 5 Jacking points
- 7 Air-bag and Pre-tensioners
- 9 Fuel
- 10 Engine oil
- I I Transmission oil
- 12 Coolant
- 13 Air conditioning refrigerant
- 14 Brake and clutch fluids
- 15 Damper oils
- 16 Washer fluid
- 17 Wheel and tyre
- 18 Catalysts

#### Pre-treatment-foreword

#### Lubricating oils

Avoid excessive skin contact with used lubricating oils and always adhere to the health protection precautions.



Avoid excessive skin contact with used engine oil. Used engine oil contains potentially harmful contaminants which may cause skin cancer or other serious skin disorders.



Avoid excessive skin contact with mineral oil. Mineral oils remove the natural fats from the skin, leading to dryness, irritation and dermatitis.

#### **Health Protection Precautions**

Avoid prolonged and repeated contact with oils, particularly used engine oils. Wear protective clothing, including impervious gloves where practicable. Do not put oily rags in pockets. Avoid contaminating clothes (particularly those next to the skin) with oil. Overalls must be cleaned regularly. Discard heavily soiled clothing and oil impregnated footwear. First aid treatment should be obtained immediately for open cuts and wounds.

Apply barrier creams before each work period, to help prevent lubricating oil from contaminating the skin. Wash with soap and water to ensure all oil is removed (skin cleansers and nail brushes will help). Use moisturisers after cleaning; preparations containing lanolin help replace the skin's natural oils which have been removed.

Do not use petrol/gasoline, kerosene, diesel fuel, oil, thinners or solvents for cleaning skin. If skin disorders develop, obtain medical advice without delay. Where practicable, degrease components prior to handling. Wear eye protection (e.g. goggles or face shield) if there is a risk of eye contamination. Eye wash facilities should be provided in close vicinity of the work area.



SKIN IRRITANT



HARMFUL CHEMICAL



**FLAMMABLE** 



**CORROSIVE** 



**EXPLOSIVE** 






www.mg-uk.co.uk

## **Pre-treatments Sections**

#### **Pre-treatment sections**

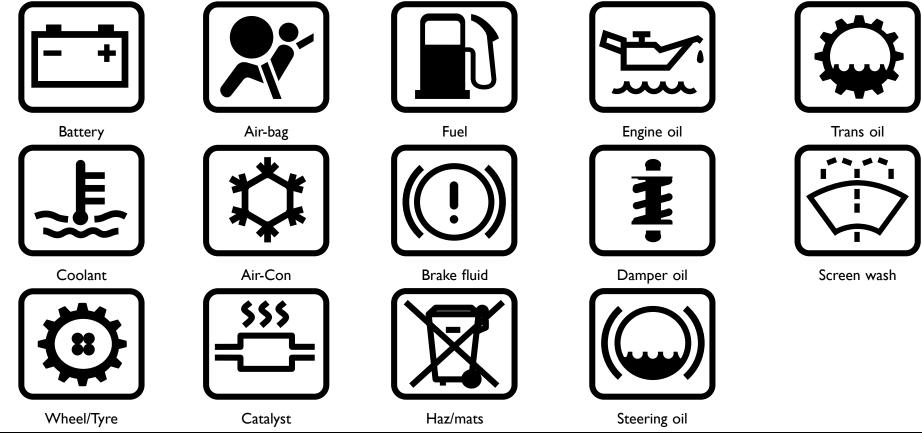



Many liquids and other substances used in motor vehicles are poisonous and should not be consumed under any circumstances. As far as possible, ensure such substances are prevented from contact with the skin. These liquids and substances include but are not limited to: acid, antifreeze, asbestos, brake fluid, fuel, windscreen washer additives, lubricants, refrigerant and various adhesives.



Always read the instructions printed on labels or stamped on components and obey them implicitly. Such instructions are included for reasons of your health and personal safety. Never disregard them.



## **Battery**

#### **Pre-treatment-Battery removal**

Part: Battery

Weight: 17.644 kg

Hazardous substance contains highly corrosive liquid. Care points:

Do not contact with skin or eyes.


Removal method: Release battery cover. Remove bolt securing battery


fixing strap with an MI0 socket / ratchet and remove

strap.

Recycling Notes: Once removed, the battery can be recycled via a

battery recycling service provider.

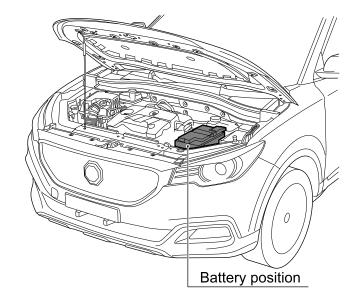

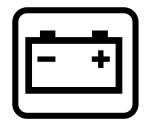

















FLAMMABLE


**CORROSIVE** 

**EXPLOSIVE** 

**SKIN IRRITANT** 

# **Jacking points**

## **Pre-treatmen-Jacking points**

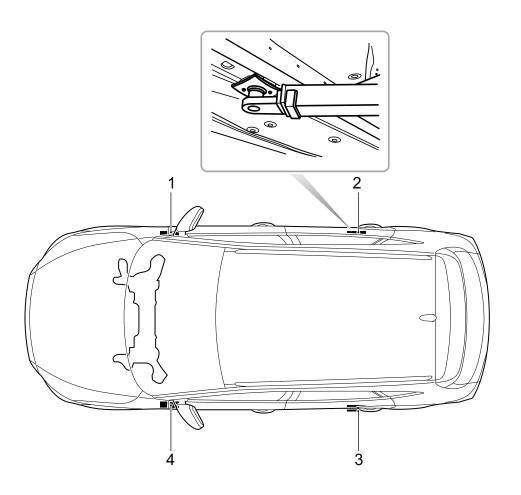

- I RH sill reinforced bracket front
- 2 RH sill reinforced bracket rear
- 3 LH sill reinforced bracket rear
- 4 LH sill reinforced bracket front

If crossbeams are available locate the pads under the sill reinforced jacking brackets (1,2) and (3,4), raise the lift a few inches and ensure the vehicle is firmly supported. Raise the lift to full height and inspect the lifting points for security.

## Pre-treatment-Undertray removal

Part: Undertray

Weight: I.42kg

0.36kg 3.27kg


Care points:

Removal method: Raise the vehicle on a lift. Remove some screws

securing undertray to vehicle and remove undertray.

Tooling: Cross head screwdriver

Recycling Notes: To be reground

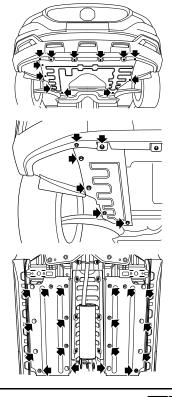

Note: Recycling of plastic material should only be conducted if a suitable waste stream is available and the part is economically viable to recycle. If waste streams are not in place these parts shall remain with the vehicle and be shredded all shredder residue shall be used for energy recovery purposes.





## Air-bag and Pre-tensioners

#### Pre-treatment - SRS deployment page I

Part: SRS (safety and restraints system)

Weight: 7.7 kg

Care points: Explosive; When airbags deploy they can cause serious

injury. Take extreme care when deploying airbags. Skin  $\,$ 

irritant, take care when handling deployed air bags.

Removal method: See notes
Tooling: See notes

Recycling Notes: N/A



SRS systems contain explosive devices, handle with care. Take extreme care when working with SRS systems. Unintentional deployment could lead to serious injury and death.











EXPLOSIVE SKIN

**IRRITANT** 

## Pre-treatment - SRS deployment continued page 2

These guidelines are written to aid authorised personnel to carry out the safety manual deployment and disposal of the SRS system.

If a vehicle is to be scrapped and contains an undeployed airbag module or pre-tensioner, the components must be manually deployed. This operation should only be carried out using an approved deployment procedure and equipment.



Always read and adhere to the SRS deployment precautions outlined in the equipment safety manual.

Always remove the key from the ignition switch and disconnect the vehicle battery (negative lead first) before starting the deployment procedures. Always observe the system safety instructions prior to use. Always wait for a period of 10 minutes (to allow the energy reserve capacitors to discharge) before disconnecting or removing any SRS components. Deploy the SRS system in a well ventilated, specially designated area. Ensure the seat belt pre-tensioner or airbag is not damaged or ruptured before deploying.



Do not lean over the airbag module whilst connecting.



Ensure all personnel are standing at least 15 metres (50 ft.) away prior to deployment.



A deployed airbag module/pre-tensioner will be very hot. DO NOT attempt to handle the module for 30 minutes after deployment.



Wear a face shield and gloves when handling a deployed pre-tensioner unit or airbag. Wash hands and rinse well after handling a deployed pre-tensioner unit or airbag. \*Skin irritant. DO NOT re-use, sell or salvage any parts of the seat belt, pre-tensioner or airbag assemblies. All parts should be shredded with the complete vehicle.











#### **Fuel**

#### **Pre-treatment-Fuel system**

Petroleum Part:

Weight: Dependent on level

Care points: Highly flammable take care with sources of ignition,

ensure battery is removed or disconnected. Skin /


eye irritant.

Removal method: Fuel recovery device, follow manufacturer's guidelines.

Tooling: Fuel recovery device

Once fuel is collected, it can be returned to a fuel Recycling Notes:

handling service for filtering and treatment.

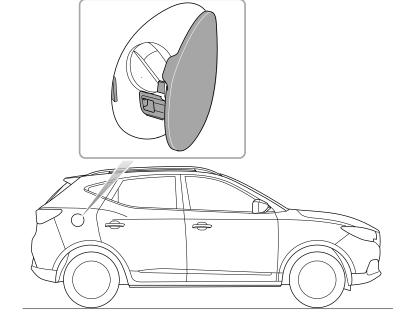



Petrol / gasoline vapour is highly flammable, and in contained spaces is also explosive and toxic. Always have a fire extinguisher containing FOAM, C02 or Powder close at hand when handling or draining fuel















**HARMFUL FLAMMABLE CHEMICAL** 

**EXPLOSIVE** 

**SKIN IRRITANT** 

## **Engine oil**

#### **Pre-treatment - Engine lubrication**

Part: Engine oil

Weight: 3.825 kg

Care points: Skin irritant, repeated contact with used engine oil

may cause serious skin disorders.


Removal method: Remove sump plug and drain oil into suitable

container.

Ratchet / socket Tooling:

Recycling Notes: Drain oil into recycling tank, specialist service provider

will recycle used oil.

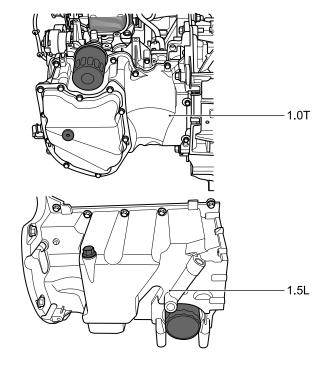



Avoid excessive skin contact with used engine oil. Used engine oil contains potentially harmful contaminants which may cause skin cancer or other serious skin disorders. Avoid excessive skin contact with mineral oil. Mineral oils remove the natural fats from the skin, leading to dryness, irritation and dermatitis.





**HARMFUL** 

**CHEMICAL** 



**FLAMMABLE** 



**SKIN** 

**IRRITANT** 





#### Transmission oil

#### **Pre-treatment – Transmission Jubrication**

Part: Transmission oil

Weight: I.6 kg

Care points: Skin irritant, repeated contact with used transmission

oil may cause serious skin disorders.


Removal method: Remove drainage plug and drain oil into a suitable

container.

Tooling: Ratcher / socket

Recycling Notes: Drain oil into recycling tank, specialist service

provider will recycle used oil.

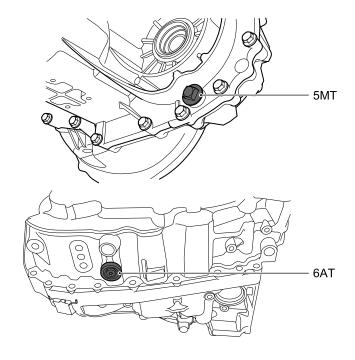



Avoid excessive skin contact with used transmission oil. Used transmission oil contains potentially harmful contaminants which may cause serious skin disorders. Avoid excessive skin contact with mineral oil. Mineral oils remove the natural fats from the skin, leading to dryness, irritation and dermatitis.





**HARMFUL** 

**CHEMICAL** 

**FLAMMABLE** 



SKIN IRRITANT





## **Coolant**

#### **Pre-treatment – Engine coolant**

Part: Coolant

Weight: 6.996 kg

Care points: Skin irritant.

Removal method: Remove expansion tank cap, cut or remove


under-floor coolant hoses while draining coolant into

a suitable container.

Tooling: Stanley style knife or pliers.

Recycling Notes: Drain coolant into recycling tank, specialist service

provider will recycle used coolant.

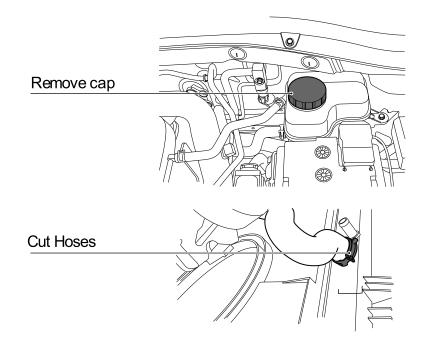



Avoid excessive skin contact with used coolant. Used coolant contains potentially harmful contaminants which may cause skin irritation.











HARMFUL CHEMICAL SKIN IRRITANT

# Air conditioning refrigerant

#### **Pre-treatment – Refrigerant**

Part: Air conditioning refrigerant

Weight: I.I kg

Care points: Skin irritant.


Removal method: Use Refrigerant recycling station

Tooling: Refrigerant recycling station

Recycling Notes: Refrigerant recycling service provider.



Refrigerant removal must only be carried out by personnel familiar with both the vehicle system and the charging and testing equipment. All operations must be carried out in a well ventilated area away from open flame and heat sources. Refrigerant must always be recycled before re-use to ensure that the purity of the refrigerant is high enough for safe use in the air conditioning system. Recycling should always be carried out with equipment which is design certified by Underwriter Laboratory Inc. for compliance with SAE J1991. Other equipment may not recycle refrigerant to the required level of purity.

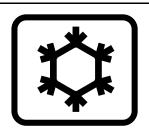









HARMFUL CHEMICAL

SKIN IRRITANT

#### **Brake and clutch fluids**

#### Pre-treatment-Brake/clutch fluid

Part: Brake and clutch fluid

Weight: 0.8 kg

Care points: Skin irritant

Removal method: Remove caps from brake and clutch servo, then cut


brake pipes in position shown. Collecting all brake

fluid within a suitable container.

Tooling:

Recycling Notes: Drain fluid into recycling tank, specialist service

provider will recycle used brake/clutch fluid.

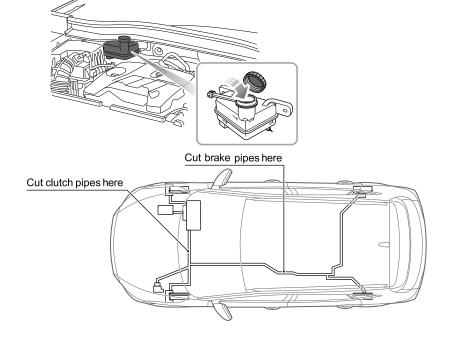



Avoid excessive skin contact with used brake fluid. Used brake fluid contains potentially harmful chemicals which may cause skin irritation.













HARMFUL CHEMICAL

FLAMMABLE

SKIN IRRITANT

## **Damper oils**

## **Pre-treatment – Damper Oil**

Part: Damper oil

Weight: 0.552 kg

Care points: Skin irritant


Removal method: Use specialist equipment for damper oil retrieval. See

manufacturers instructions.

Tooling: Specialist damper oil retrieval equipment.

Recycling Notes: One oil has been retrieved recycle using oil retrieval

service.

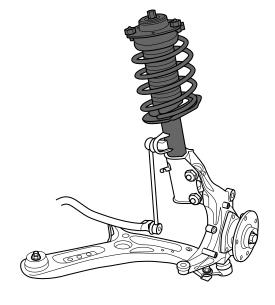



Avoid excessive skin contact with used damper oil. Used damper oil contains potentially harmful chemicals which may cause serious skin disorders.



Avoid excessive skin contact with mineral oil. Mineral oils remove the natural fats from the skin, leading to dryness, irritation and dermatitis.





HARMFUL CHEMICAL



FLAMMABLE



SKIN IRRITANT





## Washer fluid

#### Pre-treatment - Screen wash

Part: Screen wash

Weight: I.41 kg

Care points: Flammable, Skin irritant


Removal method: Pierce washer bottle before removing the wheel arch

liner and wheel.

Tooling: Hammer / suitable spike

Recycling Notes: Use external service provider to recycle collected

fluids.

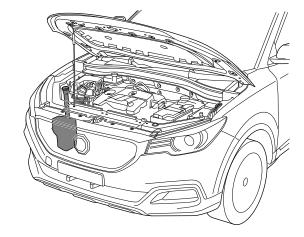



Avoid excessive skin contact with Washer fluid. May cause skin irritation. Washer fluid contains alcohol which may cause blindness if ingested.



Some screen wash products are flammable, particularly in high or undiluted concentrations. Keep screen wash away from naked flames.













HARMFUL CHEMICAL

FLAMMABLE

SKIN IRRITANT

## Wheel and tyre

#### **Pre-treatment - Wheel & Tyres**

Part: Wheel & Tyre assembly

Weight: 9.1825 kg

Care points:

Removal method: Using M17 socket remove the 5 studs. Use the locking

wheel nut key to remove any wheels where a locking

nut is present.

Tooling: Wheel brace or air powered nut runner, locking

wheel nut key.


Recycling Notes: Alloy wheel – Aluminium smelting. Tyres – energy


recovery


Tyres – energy recovery

About the spare wheel, steel wheel to be left in vehicle

for shredding but the tyre removed.

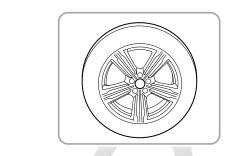

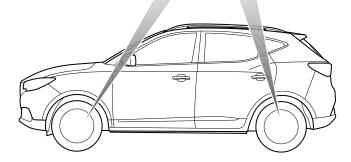

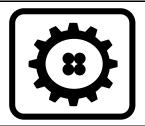





www.mg-uk.co.uk

## **Catalysts**

#### **Pre-treatment – Catalyst**

Part: Catalyst

Weight: 0.859 kg

Care points:

Removal method: Working from underneath the car, slide catalyst away

from vehicle.

Tooling:

Recycling Notes: Specialist catalyst recycler


Ensure when recycling the catalyst suitable respiratory


equipment is used.

Note: Catalyst contains heavy metals and refractory ceramic fibres which are harmful to human health.

Ensure suitable health & safety precautions are taken

when recycling the catalyst assembly.

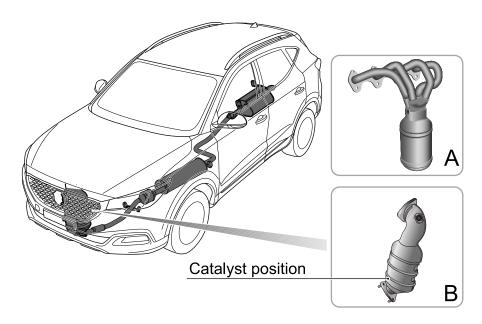

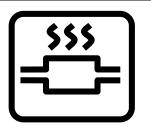



HARMFUL

**CHEMICAL** 



SKIN IRRITANT





www.mg-uk.co.uk

# Dismantling

- 20 Glazing systems
- 21 Bumpers and wheel arch liners
- 23 Re-sale and re-use of components

# **Dismantling**

## **Glazing systems**

#### **Dismantle- Glazing systems**

Part: Glazing

Weight: 13.88 kg (front)

4.58 kg (rear)

Care points:


Removal method: Cut front screen from vehicle. Remove door casing,

unscrew regulator fixings, then remove the glass.

Tooling: socket / ratchet, flat blade screwdriver

Recycling Notes: Smelt and re-use. Specific recycle service provider

required.

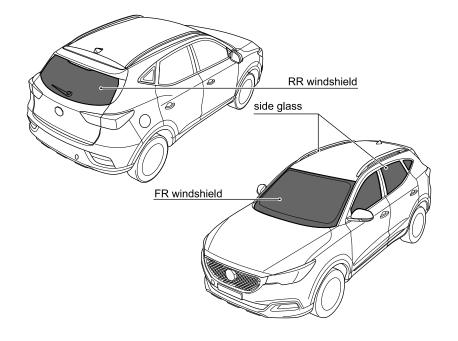

Note: Recycling of glass material should only be conducted if a suitable waste stream is available and the part is economically viable to recycle. If waste streams are not in place these parts shall remain with the vehicle and be shredded all shredder residue shall be used for energy recovery purposes.





# **Bumpers and wheel arch liners**

#### **Dismantle- Bumper systems**

Part: Front/rear bumper systems

Weight: 2.738 kg

3.001 kg

Care points:

Removal method: Release 6 screws and 2 split pins

Tooling: M10 socket and Cross head screwdriver

Recycling Notes: PP/EPDM mix, to be reground

Front Bumper

Rear Bumper

Note: Recycling of plastic material should only be conducted if a suitable waste stream is available and the part is economically viable to recycle. If waste streams are not in place, these parts shall remain with the vehicle and be shredded all shredder residue shall be used for energy recovery purposes.



# **Dismantling**

## **Dismantle- Bumper systems**

Part: Wheel arch liners

Weight: 2.736 kg


Care points:

 
Removal method: Remove 7 screws and 2 spit pins securing wheel arch

liner from body.

Tooling: Cross head screwdriver

Recycling Notes: PP/EPDM mix, to be reground

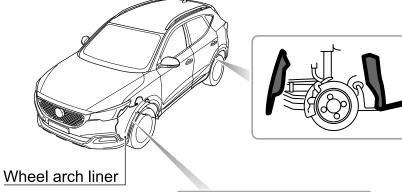



Note: Recycling of plastic material should only be conducted if a suitable waste stream is available and the part is economically viable to recycle. If waste streams are not in place these parts shall remain with the vehicle and be shredded all shredder residue shall be used for energy recovery purposes.



## Re-sale and re-use of components

#### Re-sale and Re-use of components

Under directive 2005/64/EC re-usability, recyclability and recoverability and amending directive 70/156/EEC the following parts are not permitted to be re-sold or re-used in the construction of a new vehicle.

- All airbags, including cushions, pyrotechnic actuators, electronic control units and sensors. (When the airbag is inserted in the steering wheel the steering wheel itself)
- Automatic or non automatic seat belt assemblies, including webbing, buckles, retractors, pyrotechnic actuators.
- Seats (only in cases where safety belt anchorages and/or airbags are incorporated in the seat.
- · Steering lock assemblies acting on the steering column.
- · Immobilisers, including transponders and electronic control units.
- Emission after-treatment systems (e.g. catalytic converters, particulate filters)
- Exhaust silencers.

If you wish to contact the SAIC Motor technical centre with regard to this vehicle pre-treatment and dismantling manual contact.

recycle@saicmotor.co.uk

#### Important Notice

MG Motor UK is constantly seeking to improve the specification, design and production of its vehicles and alterations take place continually. Whilst every effort is made to produce up to date literature, this UK dismantle brochure should not be regarded as a definitive guide. For further information with regard to this manual contact materials engineering SAICMotor technical Centre, Lowhill lane, Longbridge, Birmingham, B3 I 2TB.

Note: MG-Motors do not recommend the re-sale or re-use of the listed components on used vehicles due to possible concerns on: Safety, Use for theft purposes and Environmental issues.



